




THEATRE STAGE WINCH USE - THESE APPLY TO ANY MOVE.

FOR EXAMPLE, STEPS TO MOVE THE GOLD CURTAIN:

CURTAIN UP: ARBOR ALL THE WAY DOWN TO PIN RAIL.

1. Release enough cable from the spool by pushing the up button on the control. Keep cable tight as it goes out.
2. Fasten the pulley hardware to the loop at the bottom of the arbor and to the hole in the floor steel. Be sure the cable does not rub on nearby pulleys.
3. With rope locked, unload all weight from the arbor.
4. Unlock rope, push the up button and the curtain will come down to working height. Lock rope.
5. Remove curtain from pipe.
6. Unlock rope; push down button and when arbor is at the pin rail, lock rope and put pipe weight on the arbor (3 or 4 weights).
7. Unhook the pulley and cable and move it to the arbor that the curtain is going to. Fasten it as before. Again be sure it is not rubbing.
8. Lock rope. Remove pipe weight from the arbor.
9. Unlock rope; push the up button to bring in pipe to working height.
10. Attach curtain to pipe; push the down button.
11. When arbor is at pin rail, add enough weight to balance the curtain.
12. Unhook cable from arbor; keeping it tight, wind excess around spool by pressing the down button.

rushmore plaza

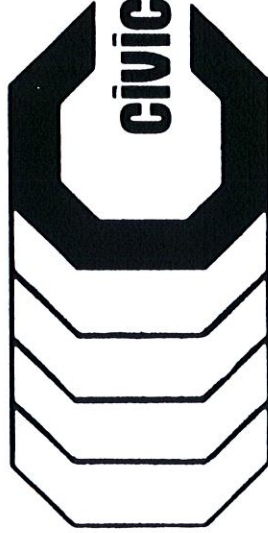

civic center

THEATRE STAGE WINCH USE - THESE APPLY TO ANY MOVE.

FOR EXAMPLE, STEPS TO MOVE THE GOLD CURTAIN:

CURTAIN UP: ARBOR ALL THE WAY DOWN TO PIN RAIL.

1. Release enough cable from the spool by pushing the up button on the control. Keep cable tight as it goes out.
2. Fasten the pulley hardware to the loop at the bottom of the arbor and to the hole in the floor steel. Be sure the cable does not rub on nearby pulleys.
3. With rope locked, unload all weight from the arbor.

4. Unlock rope, push the up button and the curtain will come down to working height. Lock rope.
5. Remove curtain from pipe.
6. Unlock rope; push down button and when arbor is at the pin rail, lock rope and put pipe weight on the arbor (3 or 4 weights).
7. Unhook the pulley and cable and move it to the arbor that the curtain is going to. Fasten it as before. Again be sure it is not rubbing.
8. Lock rope. Remove pipe weight from the arbor.
9. Unlock rope; push the up button to bring in pipe to working height.
10. Attach curtain to pipe; push the down button.
11. When arbor is at pin rail, add enough weight to balance the curtain.
12. Unhook cable from arbor; keeping it tight, wind excess around spool by pressing the down button.